



LAVATORY WSNK 2



characteristics

material s. steel

typ∈ 304

gauge 20 (0.9 mm)

finish 2b

measures

double station

Length width heigth 47.2" (120 cm) 19.7" (50.0 cm)

16.1" (41.0 cm)

mounting system

02 built in mounting brackets

04 2" x 3/8" Ø plastic anchors

04 2" x ¼ Ø screws

features

.seamuess weuded

.uandaL resistant

to be used in schoous, cuinics, hospitaus, etc.

www.stainlessad.com

4673 Osborne Dr, El Paso TX, EUA (915) 330-0092, (915) 330-0093



LAVATORY WSNK 2



characteristics

material s. steel

type 304

gauge 20 (0.9 mm)

finish 2b

measures

double station

 Length
 47.2" (120 cm)

 width
 19.7" (50 cm)

 heigth
 16.1" (41 cm)

mounting system

02 built in mounting brackets

04 2" x 3/8" Ø plastic anchors

04 2" x ¼ Ø screws

features

seamless welded

.uandaL resistant

.to be used in schools, clinics, hospitals, etc.

www.stainlessad.com

4673 Osborne Dr, El Paso TX, EUA (915) 330-0093, (915) 330-0093

INCLUDED ACCESORIES

WASTE STRAINER

- -CONVENIENT URINAL STRAINER
- -DRILLED CAP TO AVOID OBSTRUCTION
- -BRASS SLIP AND LOCK NUTS



P-TRAP

-BRASS CHROME PLATED P-TRAP, WITH SS STRAINER CONECTION.



SCREWS AND WALL ANCHORS


-4, 2" x 3/8" $\not \square$ Plastic wall anchors -4, 2" x $^{1}\!\!/_4$ " $\not \square$ Screws




- * FAUCETS NOT INCLUDED
- * FAUCET HOLES IS SINGLE HOLE PRE- DRILLED AT 1 1/4"Ø (32 MM). PLEASE TAKE NOTICE.



VIEWS

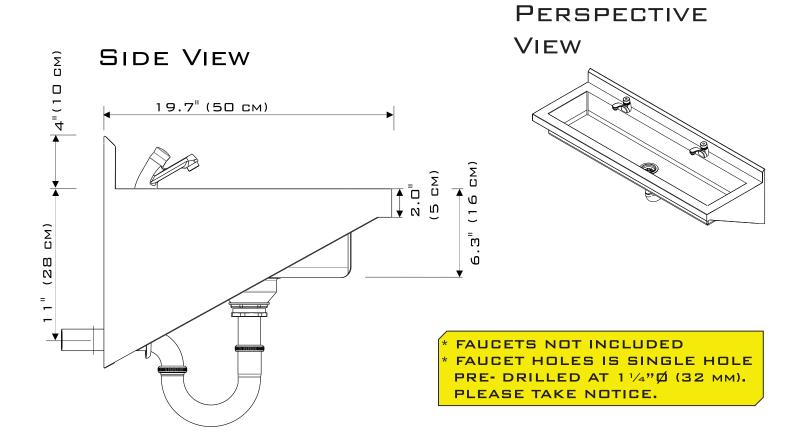

FRONT VIEW

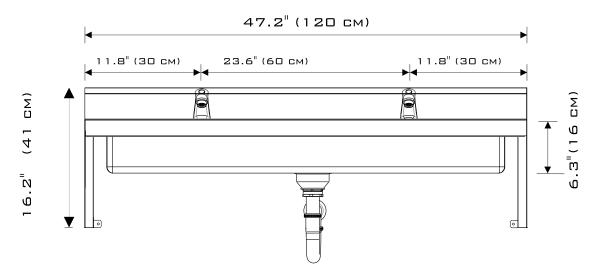


www.stainlessad.com

4673 Osborne Dr, El Paso TX, EUA (915) 330-0093, (915) 330-0093

INSTALLATION GUIDANCE

- PREPARE A 2" Ø DRAINAGE OUTLET AT 23.6" (60cm)
 HIGH FROM THE FINISHED FLOOR LEVEL.
- 2 USING AN SPIRIT LEVEL, DRAW A LINE AT 39.4" (100 CM) HIGH FROM THE FINISHED FLOOR LEVEL, NEAR THE SIDES OF THE LAVAROTY. THIS LINE WILL MATCH WITH THE UPPER BACK OF THE LAVATORY.
- 3 MEASURE THE DISTANCE BETWEEN THE BACK KEY HOLES AND HELPED WITH THE 39.4" (100 cm) DRAWN LINE, DRAW THE KEY HOLES DRILL POSITION IN THE WALL.
- ONCE MARKED THE KEY HOLES IN THE WALL, DRILL THEM WITH A 3/8" CONCRETE DRILL BIT, AND FIX THEM AFTER THE PLASTIC ANCHORS; LET A 2 MM GAP BETWEEN THE WALL AND THE SCREW HEAD, TO FIT THE LAVATORY.
- 5 HANG ON THE LAVATORY.
- AFTER THAT, AND CONFIRMED THE P-TRAP FITS INTO
 THE WALL DRAINAGE, DRAW THE LOWER DRILL HOLES.
- 7 DRILL THEM WITH A 3/8" CONCRETE DRILL BIT.
- 8 INSTALL FAUCETS, AND P-TRAP.

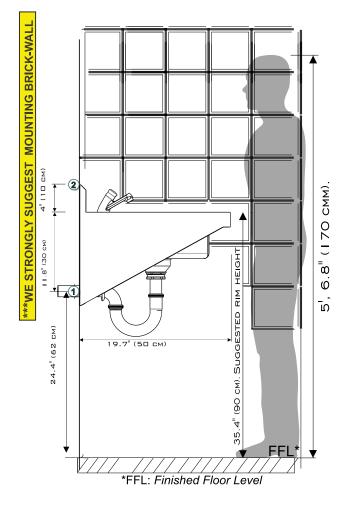

CLEANING AND MAINTENANCE

THE 304 STAINLESS STEEL-FEED GRADE TYPE, NEEDS LESS MAINTENANCE THAN OTHER METALS, ALTHOUGH REGULAR CLEANING WILL PREVENT IT TO FORMING TARTAR, AS WELL AS SALT AND MINERALS DEPOSITS LEFT BY WATER OR EVEN HARD WATER. THE FOLLOWING ARE INSTRUCTIONS IN ORDER TO KEEP THE LAVATORY APPERANCE AND FUNCTIONS PRESERVED.

- 1. Only use water and plastic scourer to clean the stainless steel surface, if needed, use dish soap, and rinse any residue.
- 2. DO NOT USE CHLORINE OR ANY PRODUCT WHICH INCLUDES IT, SINCE IT IS CORROSIVE TO METALS AND CAN DAMAGE THE STAINLESS STEEL SURFACE APPERANCE AND EVEN THE STRUCTURE.
- 3. DO NOT USE SHARPENED OBJECTS TO CLEAN THE STAINLESS STEEL SURFACE, SINCE THIS WILL BRING ABOUT SCRATCHES.
- 4.- IF WATER DOES NOT WASH ENTERELY THE LAVATORY; IT'S NEEDED TO WASH IT WITH DISH WASHER SOAP AND A PLASTIC SCOURER, IF STAINLESS STEEL IS STAINED BY OIL OR GREASE IT WILL AVOID WATER FROM ENTERELY WASH THE URINAL, SINCE OIL OR GRASE ARE HYDROPHOBIC SUBSTANCES.